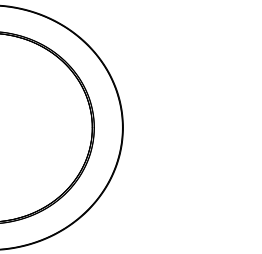# VersaLED Lighting
Versatile Lighting Solutions

INSTALLATION INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

MESURES DE SECURITE A RESPECTURE

Before assembling your SD11 fixture, please make sure that you carefully read through this instruction sheet. Save this instruction sheet and refer to it when additions to or changes in the fixture configuration are made.
CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.
Read all instructions
Do not install this fixture in hazardous locations.

Do not install any fixture assembly closer than 6 inches from any curtain or similar combustible material.

"WARNING Risk of Fire and Electric Shock."

GENERAL INFORMATION

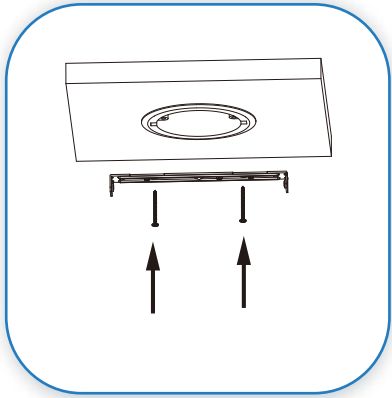| APPLICATION	MODEL NO.
Ceiling Fixture	SD11-LED

WHAT WE PROVIDE

- Mounting Hardware
- Mounting Strap
- LED

WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified by Electrical Code

All electrical connections must be in accordance with all ordinances, Local and the U.S. National Electrical Codes (NEC). These fixtures are intended for mounting to a standard 4" metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.
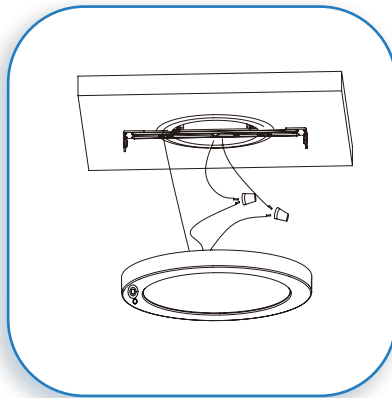
STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.
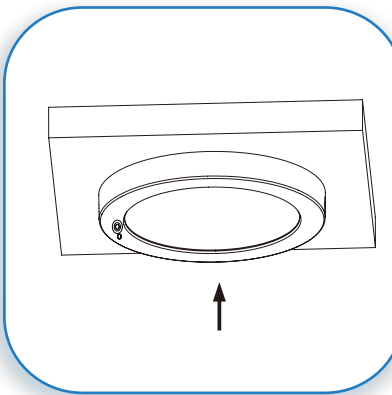
1

ATTACH MOUNTING STRAP

If there is an existing fixture remove it.
Install the mounting strap to the J-Box with the
supplied screws.

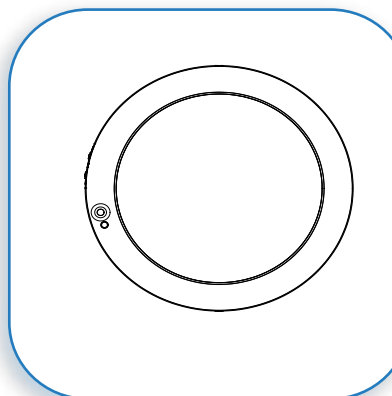# 2

MAKE WIRE CONNECTION

Expose the supply wires from the J-box.
Gently pull the supply wires through the hole in the
crossbar plate. Connect the black supply wire to
the black fixture wire. Secure with the supplied wire nuts.
Connect the white supply wire to the white fixture wire.
Secure with the supplied wire nuts. Attach the green
J-Box wire around green hexagonal head screw or
connect it to the green supply grounding wire of the
fixture. Secure all wires with electrical tape
(not supplied). Tuck all wires carefully into the J-Box.

3

MOUNT FIXTURE

Align the fixture to the mounting strap and gently push
the fixture directly into the mounting strap until secure.
A clicking sound indicates that the fixture is secured
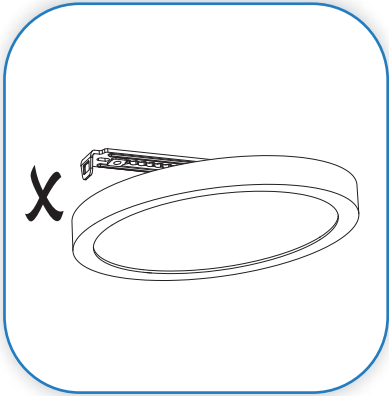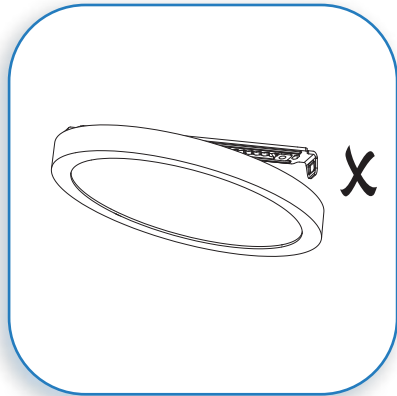and installation is completed.

4

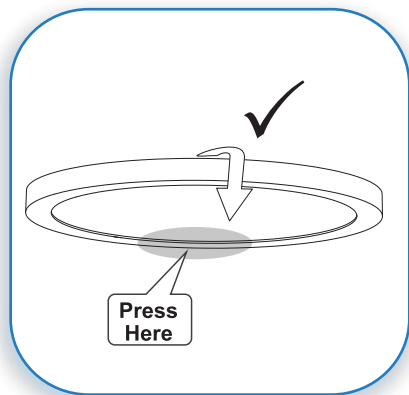## RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS LIGHTING FIXTURE

CAUTION

If the fixture is to be removed or replaced,
please ensure that the electricity is
switched off and that the fitting is cool
before touching it.

HOW TO UNINSTALL

DON'T REMOVE THE FIXTURE FROM ANY ONE SIDE OF THE SELF-LOCK MOUNTING STRAP. THIS MAY CAUSE DAMAGE TO THE FIXTURE

DON'T REMOVE THE FIXTURE FROM ANY ONE SIDE OF THE SELF-LOCK MOUNTING STRAP. THIS MAY CAUSE DAMAGE TO THE FIXTURE

Press
Here

PRESS ONE SIDE OF THE FIXTURE FRAME (PERPENDICULAR TO MOUNTING STRAP) THEN TAKE OUT THE FIXUTRE FROM THE OPPOSITE SIDE

Day and Night Sensor Function

Daylight sensor Switch
Choose Day or Night mode via the switch located on the fixture body.
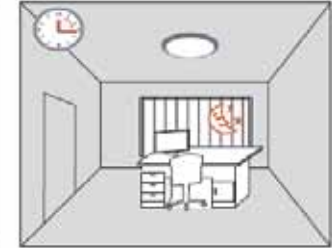
☀ Day
☾* Night

1.Daytime

When the room is illuminated with natural light, the fixture will not turn on when someone enters the room.

When no natural light is detected, the fixture will turn on when someone enters the room.
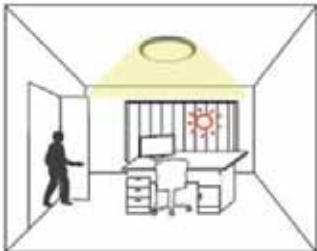
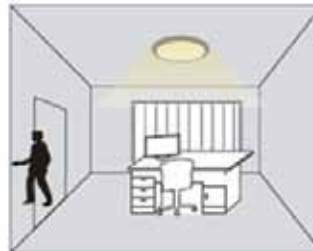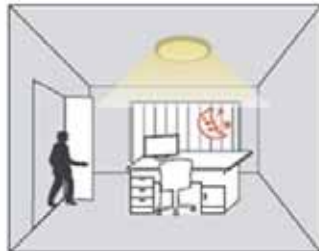The fixture will remain on for 30seconds, or until no motion is detected.

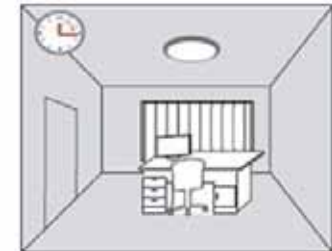The fixture will remain in standby mode when no motion is detected.

2. Nighttime

The fixture will turn on when motion is deteted, regardless of the presense of natural light.

The fixture will remain on for 30seconds, or until no motion is detected.

The fixture will remain in standby mode when no motion is detected.

Sensor diagram

15'